




Normal / Off / Manual, Manual Forward/ Reverse
 When switch is in Driver, all E-Stops/ Interlocks will be bypassed.
 Forward and Reverse switch will Start motor and Jog ram.

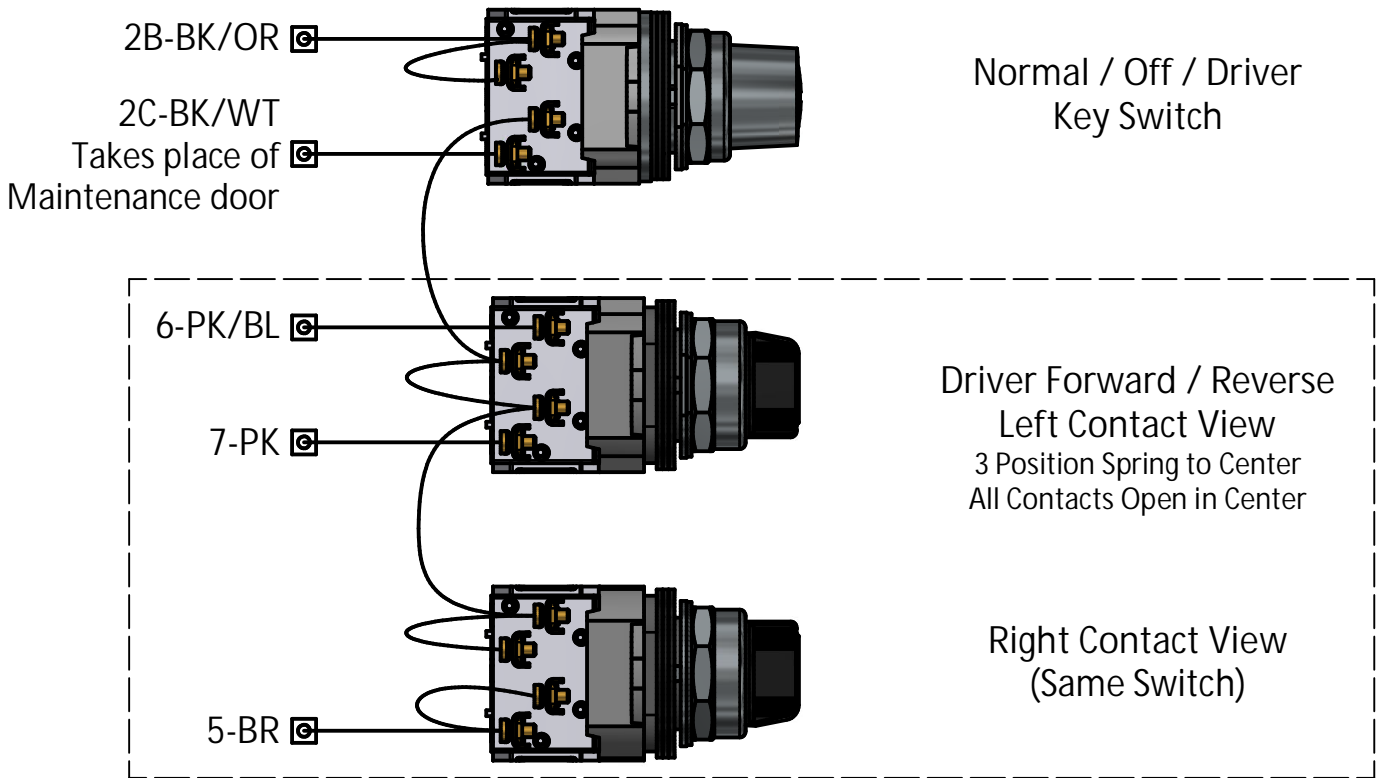

LOW VOLTAGE FEED DOOR INTERLOCK

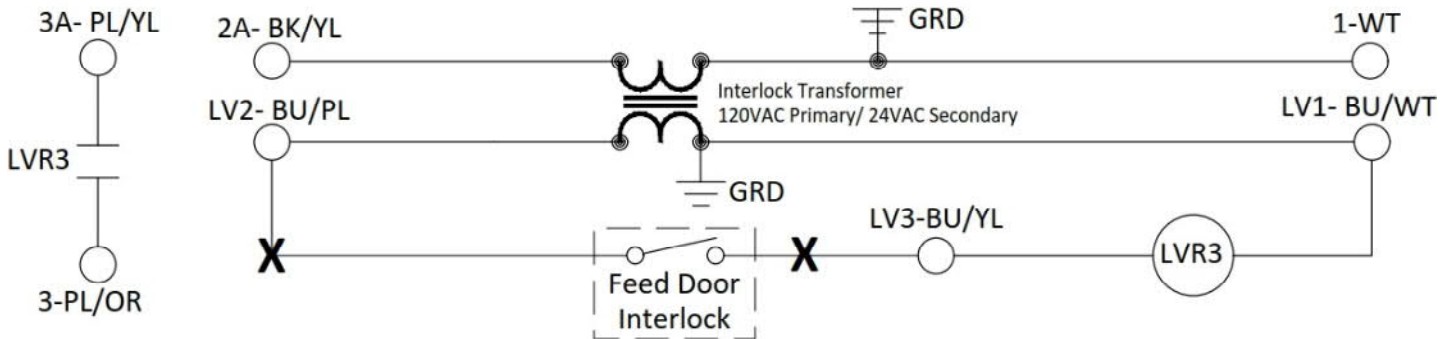

LOW VOLTAGE E-STOP OR MAINTENANCE DOOR

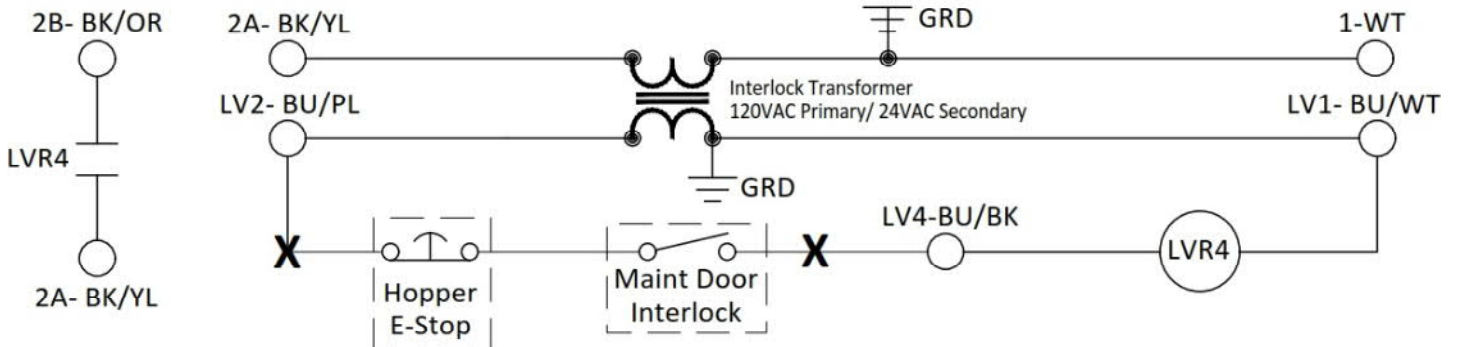

"X" indicates interlock plug. "LV_" are additional low voltage terminal blocks.
 Call PSI Waste if you need LV terminal blocks at no charge.
 "LVR3" and "LVR4" are 24VAC relays(not provided).