

Keypad Start Schematic KS-1.0

Support: www.versa-pak.net
352-742-4774

Operation:

1357#

Compactor should start

Adding Codes

You can program additional codes using the below format:

1 [sequential code numbers 00 – 99] [4 to 8-digit code you would like to use] #

You can add a total of 100 different codes. Be sure to write them down in a chart before programming so you don't overwrite one. Below is an example of how to add codes 01 – 03. To exit programming mode press * at any time. If the keypad beeps 5 times rapidly you entered something incorrectly. Exit the program by pressing *. Try the last code you entered to make sure it was accepted then enter programming mode again by starting at the top.

31130*

Keypad will beep twice

101 [4 to 8 digit code you would like to use] #

Keypad will beep twice

102 [4 to 8 digit code you would like to use] #

Keypad will beep twice

103 [4 to 8 digit code you would like to use] #

Keypad will beep twice

*

PSI Waste Equipment Services
Keypad Start Schematic KS-1.0
 Support: www.versa-pak.net
 352-742-4774

